



表357：PHSシリーズ寸法表

単位：mm

型番 右ネジ 左ネジ	主 要 寸 法														ボール径 インチ B	動定格荷重 C (kN)	質 量 (kg)
	d	d <sub>1</sub>	D	D <sub>1</sub>	D <sub>2</sub>	W	T	L	L <sub>1</sub>	L <sub>2</sub>	L <sub>3</sub>	S	H	r			
PHS5 PHS5L	5	7.7	16	9	11	6	8	35	27	12	4	M5×0.8	9	0.5	1/16	2.9	0.018
PHS6 PHS6L	6	9	18	10	13	6.7	9	39	30	14	5	M6×1	11	0.5	1/8	3.7	0.026
PHS8 PHS8L	8	10.4	22	12.5	16	9	12	47	36	17	5	M8×1.25	14	0.5	3/8	6.5	0.046
PHS10 PHS10L	10	12.9	26	15	19	11	14	56	43	21	6.5	M10×1.5	17	0.5	3/4	9.7	0.074
PHS12 PHS12L	12	15.4	30	17.5	22	12	16	65	50	24	6.5	M12×1.75	19	1	7/8	12.2	0.113
PHS14 PHS14L	14	16.9	34	20	25	14	19	74	57	27	8	M14×2	22	1	1	16.5	0.166
PHS16 PHS16L	16	19.4	38	22	27	15	21	83	64	33	8	M16×2	22	1	1 1/8	20.0	0.202
PHS18 PHS18L	18	21.9	42	25	31	17	23	92	71	36	10	M18×1.5	27	1.5	1 1/4	25.1	0.296
PHS20 PHS20L	20	24.4	46	27.5	34	18	25	100	77	40	10	M20×1.5	30	1.5	1 3/8	29.3	0.364
PHS22 PHS22L	22	25.8	50	30	37	20	28	109	84	43	12	M22×1.5	32	1.5	1 1/2	35.8	0.480
PHS25 PHS25L	25	29.6	56	33.5	42	22	31	122	94	48	12	M24×2	36	2	1 5/8	43.9	0.673
PHS30 PHS30L	30	34.8	67	40	50	26	37	143.5	110	56	15	M30×2	41	2	2	62.2	1.050

表358：許容傾斜角度

単位：度

PHS	内径 d (mm)											
	5	6	8	10	12	14	16	18	20	22	25	30
a <sub>1</sub>	4.5	8	10	8	10	11	12	11	11	12	12	12
a <sub>2</sub>	7	11	14	12	13	14	15	14	14	15	15	15

